


3/16" DIA THRU HOLE
12 PLACES

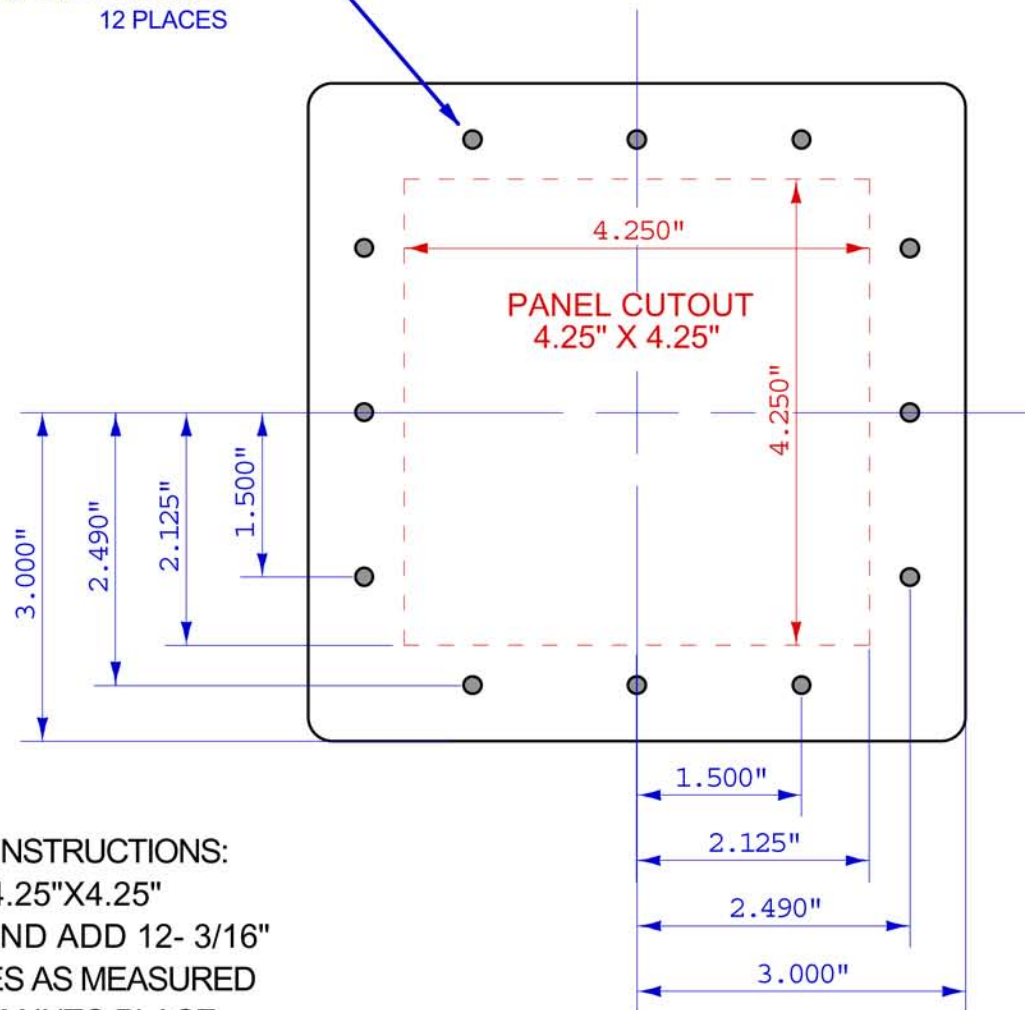

MOUNTING INSTRUCTIONS:

- CUT OUT 4.25"X4.25" SQUARE AND ADD 12- 3/16" THRU HOLES AS MEASURED
- DROP HP-PM INTO PLACE BRINGING THE STUDS THROUGH THE 3/16" HOLES AND TIGHTEN DOWN WITH SUPPLIED NUTS.